



CST001 SIDEWINDER FITMENT GUIDE [FEBRUARY 2023]

CST001 SKATEPLATE FITS THESE 7 ¼" SAW MODELS

CORDED

Black & Decker	BDECS200C; BDECS300C; BD2694; CS1250L
Bosch	CS10; GKS190; PKS55-A; PKS55-2A
Bostich	BTE300K
Craftsman	10870; 135.27541; 27311; 315.10821; CMES510
DeWalt	DWE363; DWE550; DWE560-B3; DWE560-EXB; DWE560-GB; DWE560-K; DWE560-LX; DWE575; DWE575K; DWE575SB; DWE576K; DWE576K-LX
Dexter Power	NC1300CS
Evolution	R185CCS; R185CCSL; R185CCSL240; R185CCSX; RAGE-B
Hitachi	C7BMR; C7BUR; C7SB2; C7SB3; C7SB3M; C7ST; C7UR
Kobalt	K15CS-06AC
Makita	5007F; 5007FA; 5007MG; 5007MGA; 5007NB; 5007NK; 5037NB; 5740NB; 5806B; HS6601; HS7600
Milwaukee	6390-20; 6390-21; 6394-21
Porter Cable	PC13CSL; PC13CSLK; PC15CSL; PC15TCS; PC15TCSMK; PCE300; PCE310; PCTSM
Ridgid	R32021; R32022; R32051
Ryobi	CSB124; CSB125; CSB135L; CSB143LZ; CSB144LZK
SKIL	5080-01; 5150; 5180-01; 5275; 5280-01; 5380-01; 5480-00; 5480-01; 5580-00; 5282-00; 5585-01; 5587-01; 5680-01; 5680-02; HD5687; SPT67FMD-01; SPT67FMD-22; SPT67WE-01; SPT67WL-01; SPT67WM-22; SPT67WMB-01; SPT67WMB-22

CORDLESS

Craftsman	CMCS550
DeWalt	DCS570B; DCS570P1; DCS573B; DCS574; DCS575; DCS575B; DCS575T1; DCS575T2; DCS578B; DCS578XI
Flex	FX2141-1D
Hitachi Metabo HPT	C3607DA; C3607DAQ4
Kobalt XTR	KXCS-124B-03
Makita	DHS711Z; GSH01-XGT; XSH01Z; XHS06Z; XSH07ZU



Milwaukee	48-59-1890PC; 2631-20; 2731-20; 2731-22HD
Ridgid	R8404437SBN; R8652; R8652B; R8653B; R8654; R8654B
SKIL	
Stanley Fatmax	FME300K-QS; FME301

CST001 SKATEPLATE DOES NOT FIT THESE 7 ¼" SIDEWINDER SAWS

Black & Decker SawCat BD3030
 Bosch GKS25C; GKS25GC
 DeWalt DW364K; DW368K; DW374
 Milwaukee M18 Fuel 2732-20 Cordless; Milwaukee M18 Fuel 2732-21HD Cordless
 Porter Cable 315
 Rockwell 316; 317; 318
 Ryobi PBLCS300B

CST001 SKATEPLATE DOES NOT FIT 6 ½" SIDEWINDER SAWS

CST002 WORM DRIVE FITMENT GUIDE [FEBRUARY 2023]

CST002 SKATEPLATE FITS THESE 7 ¼" WORM DRIVE SAW MODELS

CORDED

Bosch	CS41MAG; CSW41; 1677M
DeWalt	DWS535; DWS535B; DWE535T
Hitachi	C7WDM
Makita Hypoid	5277NB; 5377MG; 5477NB
Milwaukee	6391-21; 6577-20
Ridgid	R3210-1; R3210-2; R3210-4
SKIL	HD77LA; MAG77LT; MAG77LT-72; MAG77LT-75; SHD77; SHD77LA; SHD77M; SHD77M-02; SHD77M-72; SHD77M-73; SHF77-72; SHF77-73; SPT77W-01; SPT77W-22; SPT77WM-22; SPT77WML-01; SPT77WML-22

CORDLESS

DeWalt	DCS577; DCS577B; DCS577XI
Flex	FX2141R-1J
Makita	DRS780Z; GSR01-XGT; XSR01; XSR01PT
Milwaukee	2830-20; 2830-21HD
SKIL	SPTH77M



CST002 SKATEPLATE DOES NOT FIT THESE 7 ¼" WORM DRIVE SAWS

Ryobi P508 Cordless
Skilsaw SPT67M8-01 Left Blade Sidewinder; Skil PWRCore 20V XP CR5429B-20

CST002 SKATEPLATE FITS THESE 6 ½" SAWS

DeWalt	DCS391B Cordless; DCS565 Cordless; DCS566 Cordless
Makita	XSH03
Milwaukee	2730-20 Cordless; M18CCS55